

# Commissioning

Limeteq Base develops large internal forces and contains components that can be sensitive to powerful pressure surges. Once Limeteq Base has been installed, follow the commissioning procedure below.

Ensure that the Limeteq Base unit has been installed in accordance with the installation instructions and is ready to go into service.



First open the ejector so that water can flow out through the system when it is filled for the first time in order that major pressure surges do not arise in the system.

If Limeteq Base has been fitted to a pipe supplying mixed cold and hot water, use only cold water when filling the system for the first time.



Allow water into the system carefully so that it fills slowly. Check at the connection points to make sure the system is watertight.

When the system is full of water, the ejector can be turned off.

Finished

